



User Guide

SCP-2700 by SANYO®

www.sprint.com

© 2009 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are the property of their respective owners. SANYO is a registered trademark of SANYO Electric Co., Ltd. and used under license.

Consejo

Para encontrar esta guía para usuarios en español, por favor visita a www.sprint.com y haz clic en Support > Phones & Devices.

To find this user guide in Spanish, please visit www.sprint.com and click Support > Phones & Devices.

Table of Contents

Tip Looking for something? If you don't see it in the headings listed here, try the Index on page 143.

Introduction	i
Your Phone's Menu	i
Section 1: Getting Started	1
1A. Setting Up Service	2
Setting Up Your Phone	2
Activating Your Phone	3
Setting Up Your Voicemail	4
Sprint Account Passwords	4
Getting Help	5
Section 2: Your Phone	7
2A. Phone Basics	8
Your Phone	8
Viewing the Display Screen	10
Turning Your Phone On and Off	14
Battery and Charger	14
Navigating Through the Menus	16
Displaying Your Phone Number	17
Setting the Key Guard	17
Making and Answering Calls	18
Entering Text	27
Simple Data Exchange	31
2B. Settings	33
Sound Settings	33
Display Settings	37
Messaging Settings	40
Airplane Mode	43
TTY Use With Sprint Service	43
Using the Hearing Aid Device Compatibility Function	45
Phone Setup Options	45
Security Settings	47
2C. History	52
Viewing History	52
History Thread	53
History Details	53

History Menu Options	54
Making a Call From History	54
Saving a Phone Number From History	54
Making a New Group Entry From History	55
Deleting History	55
2D. Contacts	56
About Contacts	56
Displaying the Contacts List	56
Displaying Contacts Details	57
Adding a New Contacts Entry	57
Creating a Group	58
Editing Groups	58
Finding Contacts Entries	59
Viewing History From Contacts	60
Using Contacts Information in Other Applications	60
Editing a Contacts Entry	61
Assigning Speed Dial Numbers	61
Selecting a Ringer Type for an Entry	62
Assigning a Picture to a Contacts Entry	62

Printing a Contacts Entry	62
Secret Contacts Entries	63
Dialing Sprint Services	64
Wireless Backup	64
2E. Calendar and Tools	66
Calendar	66
Alarm Clock	70
Calculator	71
World Clock	71
Countdown Timer	71
Stopwatch	72
2F. Voice Services	73
Automatic Speech Recognition (ASR)	73
Voice and Call Memos	76
2G. Camera	78
Taking Pictures	78
Storing Pictures	83
Sending Sprint Picture Mail	85
Viewing Sprint Picture Mail	87
Managing Sprint Picture Mail	88

Printing Pictures From Your Phone	90	Call Forwarding	109
2H. Bluetooth	92	Roaming	110
About Bluetooth	92	3B. Web and Data Services	113
Turning Bluetooth On and Off	92	Getting Started With Data Services	113
Making Your Phone Discoverable	92	Accessing Messages	117
Bluetooth Menu	93	Downloading Games, Ringers, and More	118
Bluetooth Settings Menu	94	Browser Menu	121
Bluetooth Profiles	95	Data Services FAQs	124
Pairing Bluetooth Devices	96	3C. GPS Navigation	125
Trusted List Options	96	GPS Services	125
Sending Data via Bluetooth	97	Sprint Navigation	126
Printing Data via Bluetooth	97	Sprint Family Locator	127
Section 3: Sprint Service	99	Section 4: Safety and Warranty	
3A. Sprint Service: The Basics	100	Information	129
Voicemail	100	4A. Important Safety Information	130
Text Messaging (SMS)	103	General Precautions	130
SMS Voice Messaging	106	Maintaining Safe Use of and Access to	
Caller ID	108	Your Phone	131
Call Waiting	108	Using Your Phone With a Hearing Aid Device ..	132
Making a Three-Way Call	109	Caring for the Battery	134

Radio Frequency (RF) Energy	135
Owner's Record	137
User Guide Proprietary Notice	138
4B. Manufacturer's Warranty	139
Manufacturer's Warranty	140
Index	143

Introduction

This *User Guide* introduces you to Sprint® service and all the features of your new phone. It's divided into four sections:

- Section 1: Getting Started
- Section 2: Your Phone
- Section 3: Sprint Service
- Section 4: Safety and Warranty Information

User Guide Note

Because of updates in phone software, this printed guide may not be the most current version for your phone. Visit www.sprint.com and log on to MySprint Wireless to access the most recent version of the user guide.

WARNING

Please refer to the Important Safety Information section on page 130 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death, or property damage.

Your Phone's Menu

The following table outlines your phone's main menu structure. For more information about using your phone's menus, see "Navigating Through the Menus" on page 16.

1: Missed Alerts
2: History
3: Maps
1: Navigation
2: Family Locator
4: Web
5: Messages
1: Voicemail
1: Call Voicemail 2: Details
3: Reset Indicator

2: Send Message	
1: Text Message	2: Picture Mail
3: Email	4: IM
5: Voice SMS	
3: Text Messages	
4: Picture Mail	
5: Email	
6: IM	
7: Chat & Dating	
8: Voice SMS	
9: Settings	
1: Notification	2: Callback Number
3: Signature	4: Preset Messages
5: Voice SMS Options	
6: Contacts	

7: Photos	
1: Camera	
<i>Press the right softkey for the following options:</i>	
1: Picture Mode	2: Zoom
3: Self-Timer	4: Fun Tools
5: Image Controls	6: Camera Settings
7: Review Media	8: Key Guidance
9: User Settings	
2: Picture Mail	
3: My Albums	
1: In Phone	2: Online Albums
4: PictBridge	
5: Order Prints	
6: Settings & Info	
1: Location	2: Status Bar
3: Slideshow Interval	4: Account Info
5: Help	

8: My Stuff
1: Games
2: Ringers
3: Screen Savers
4: Applications
5: IM & Email
6: Call Tones
9: Shopping
0: Tools
1: Alarm Clock
2: Assigned Media
3: Bluetooth
1: Handsfree Pairing 2: Send Contact
3: Print Picture 4: Add to Trusted
5: Trusted List 6: Send Biz Card
7: More...

4: Calculator
5: Calendar
6: Countdown
7: Stopwatch
8: Update Firmware
9: Voice Memo
1: Record 2: List
0: World Clock
*: My Account
1: Account Details
2: Hear Minutes
3: Hear Balance

#: Settings	
1: Display	
1: Main Screen	
1: Screensaver	2: Animation
3: Backlight	4: Input Font
5: Foreground	6: Sleep Mode
2: Contrast	
3: Font Size	
1: Main Screen	
4: Keypad Light	
5: Language	
1: English	2: Español
6: Power Save Mode	
7: Return to Idle	
1: Automatically	2: End Key

2: Sounds	
1: Volume	
1: Ringer	2: Earpiece
3: Headset	4: Speakerphone
5: Applications	6: Start Up/PowerOff
7: Advanced...	
2: Ringer Type	
1: Incoming Calls	2: Messages
3: Alarm	4: PowerOn
5: PowerOff	6: Schedule
3: Alerts	
1: Beep Each Minute	2: Out of Service
3: Connect	4: Signal Fade/Call Drop
5: Messages	
4: Keytones	
1: Tone Length	2: Tone Volume
3: Tone Type	
5: Voice Guide	
6: Vibrate Type	
1: Incoming Calls	2: Messages
3: Alarm	4: Schedule

<i>3:Bluetooth</i>
1: On/Off
2:Visibility
3: Device Name
4: Device Info
5: Trusted List
6: Voice Priority
<i>4: Messages</i>
1: Notification
1: Msgs and Icon 2: Icon Only
2: Callback Number
1: My Phone Number 2: Other 3: None
3: Signature
4: Preset Messages
5: Voice SMS Options
1: Speakerphone 2: From Name 3: Connection Alert

<i>5: Text Entry</i>
1: Auto-Capital 2: Auto-Space 3: My Words 4: Predictive Settings 5: Default Input Mode 6: Add Word 7: Auto-Substitution 8: Auto-Complete 9: Help
<i>6: Phone Info</i>
1: Phone #/User ID 2: Icon Glossary 3: Version 4: Advanced 5: Account Details
<i>7: More...</i>
1: Accessibility
1: TTY 2: Input Font 3: Font Size 4: Vibrate Type 5: Hearing Aid
2: Airplane Mode
3: Browser
1: Favorites 2: Delete Web Cache 3: Delete Web Cookies 4: Edit Home Page

4: Call Setup	
1: Call Answer	2: Auto-Answer
3: Abbreviated Dialing	4: Contacts Match
5: Contacts	
1: Speed Numbers	2: Hide Secret/Show Secret
3: My Name Card	4: Wireless Backup
5: Services	
6: Data	
1: Enable/Disable Data	2: Net Guard
3: Update Profile	
7: Headset Mode	
1: Turbo Button	2: Ringer Sound
8: Location	
9: Power On to Alert	
0: Restrict and Lock	
1: Voice	2: Data
3: Camera/Pictures	4: Lock My Phone
*: Roaming	
1: Set Mode	2: Call Guard
3: Data Roaming	

#: Security	
1: Lock My Phone	2: Change Lock Code
3: Special Numbers	4: Edit Contacts List
5: Delete/Reset	
: Navigation Keys	
1: Left Navigation (Calendar)	2: Right Navigation (Web)
3: Up Navigation (Maps)	4: Down Navigation (My Stuff)
: Auto Key Guard	
: Wireless Backup	
(Before subscribing)	
1: Subscribe	2: Learn More
(After subscribing)	
1: Alert	2: View Status
3: Troubleshoot	4: Learn More
5: Unsubscribe	
In Use Menu	
Press <i>(right softkey)</i> to display the following options:	
1: Save/Contact Details	2: Main Menu
3: 3-Way Call	4: Contacts
5: Voice Memo	6: Phone Info

Section 1
Getting Started



1A. Setting Up Service

Setting Up Your Phone (page 2)

Activating Your Phone (page 3)

Setting Up Your Voicemail (page 4)

Sprint Account Passwords (page 4)

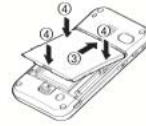
Getting Help (page 5)



Setting Up Your Phone

1. Install the battery.

Insert the battery into the opening on the back of the phone, making sure the connectors align (1), and gently press it down (2).

Replace the battery cover and press it down until the latch snaps into place (3 and 4).



2. Press and hold  to turn the phone on.
If your phone is activated, it will turn on, search for Sprint service, and enter standby mode.
If your phone is not yet activated, see "Activating Your Phone" on page 3 for more information.
3. Make your first call.
Use your keyboard to enter a phone number.
Press .

Note *Your phone's battery should have enough charge for your phone to turn on and find a signal, set up your voicemail, and make a call. You should fully charge your battery as soon as possible. See "Charging the Battery" on page 16 for details.*

Activating Your Phone

If you purchased your phone at a Sprint Store, your phone should be activated and ready to use.

If you received your phone in the mail and it is for a new Sprint account or a new line of service, it is designed to activate automatically. To confirm your activation, make a phone call.

If you received your phone in the mail and you are activating a new phone for an existing number on your account, you will need to go online to activate the number on your new phone.

From your computer's Web browser, go to www.sprint.com/activate and complete the onscreen instructions to activate your phone.



When you have finished, make a phone call to confirm your activation. If your phone is still not activated or you do not have access to the Internet, contact Sprint Customer Service at 1-888-211-4727 for assistance.

Tip Do not press END while the phone is being activated. Pressing END cancels the activation process.

Note If you are having difficulty with activation, contact Sprint Customer Service by dialing 1-888-211-4727 from any other phone.

Setting Up Your Voicemail

Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your phone is activated.

1. From standby mode, press and hold .
2. Follow the system prompts to:
 - Create your passcode.
 - Record your name announcement.
 - Record your greeting.
 - Choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding , bypassing the need for you to enter your passcode).

Note Voicemail Passcode
If you are concerned about unauthorized access to your voicemail account, Sprint recommends that you enable your voicemail passcode. (Do not activate One-Touch Message Access.)

For more information about using your voicemail, see "Voicemail" on page 100.

Sprint Account Passwords

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account, and your data services account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

Account User Name and Password

If you are the account owner, you will create an account user name and password when you sign on to www.sprint.com. (Click *Need to register for access?* to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at www.sprint.com.

Voicemail Password

You will create your voicemail password (or passcode) when you set up your voicemail. See "Setting Up Your Voicemail" shown left for more information on your voicemail password.

Data Services Password

With your Sprint phone, you may elect to set up an optional data services password to control data (Web) access and authorize Premium Service purchases.

For more information, or to change your passwords, sign on to www.sprint.com or call Sprint Customer Service at 1-888-211-4727.

Getting Help

Managing Your Account


Online: www.sprint.com


- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other products like Sprint Picture Mail, games, ringtones, screen savers, and more.

From Your Sprint Phone

Explore any of these *free* options right from your phone:

Press  to check minute usage and account balance.

Press  to make a payment.

Press  to access a summary of your Sprint service plan or get answers to other questions.

From Any Other Phone

Sprint Customer Service: 1-888-211-4727.

Business Customer Service: 1-800-927-2199.

Sprint 411

Sprint 411 gives you access to a variety of services and information through your phone, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

To call Sprint 411:

Press .

Sprint Operator Services

Sprint Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party.

To access Sprint Operator Services:

Press .

For more information or to see the latest in products and services, visit us online at www.sprint.com.

Section 2
Your Phone



